

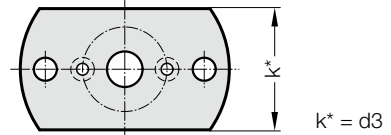
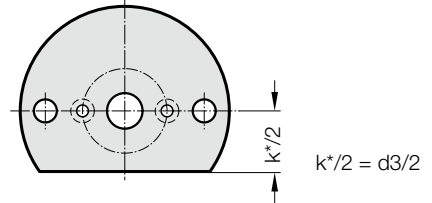


ADJUSTING WASHER

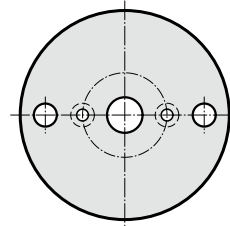

2441.11.3.

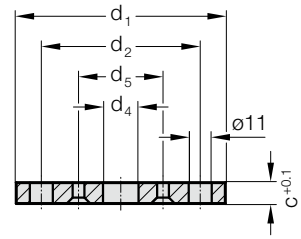

Material:

C45 or similar

Note:

2441.11.3.□□□

Adjusting washer

2441.11.3.□□□.1

Adjusting washer with one flat side

2441.11.3.□□□.2

Adjusting washer with two flat sides

2441.11.3. Adjusting washer

Order No	d ₁	d ₂	d ₄	d ₅	c	k
2441.11.3.100	100	76	17	40.5	9.8	-
2441.11.3.100.1	100	76	17	40.5	9.8	58
2441.11.3.100.2	100	76	17	40.5	9.8	58
2441.11.3.105	105	76	18	40.5	5.5	-
2441.11.3.120	120	96	17	50.5	9.8	-
2441.11.3.120.1	120	96	17	50.5	9.8	78
2441.11.3.120.2	120	96	17	50.5	9.8	78
2441.11.3.125	125	96	18	50.5	5.5	-